

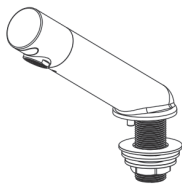


TOUCH-FREE TAPS


DE	Montage- und Betriebsanleitung	Berührungslose Wasserhähne
EN	Installation and operating instructions	Touch-free taps
FR	Notice de montage et de mise en service	Robinets sans contact
ES	Instrucciones de montaje y servicio	Grifos sin contacto
IT	Istruzioni per il montaggio e l'uso	Rubinetti touch-free
NL	Montage- en bedrijfsinstructies	Aanraakvrije kranen
PL	Instrukcja montażu i obsługi	Krany bezdotykowe
SV	Monterings- och driftinstruktion	Beröringsfria kranar
CS	Návod pro montáž a provoz	Bezdotykové kohoutky
FI	Asennus- ja käyttöohje	Kosketusvapaat hanat
RU	Инструкции по установке и эксплуатации	бесконтактные краны

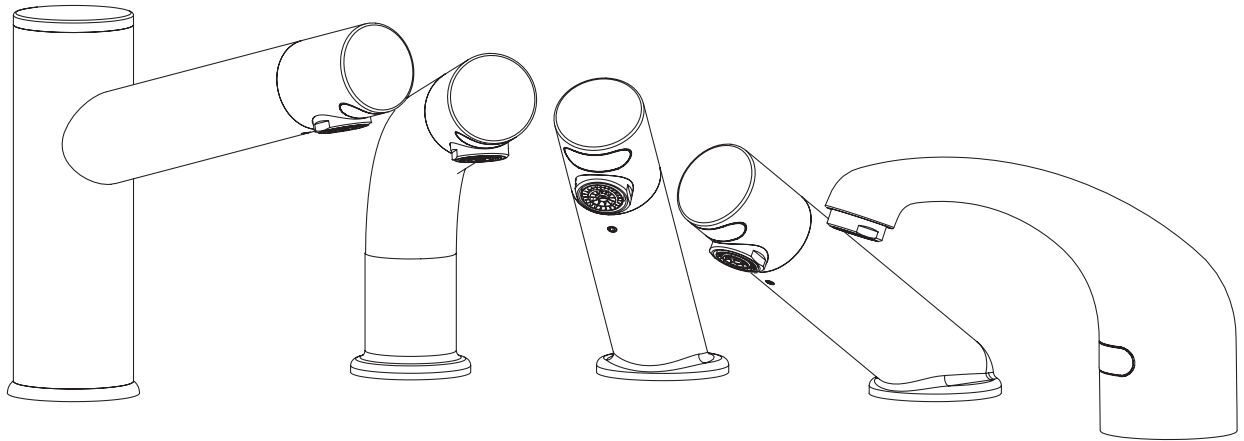


Automatic tap example

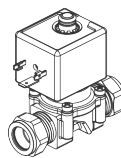

 
Solenoid valve AC17-006
or AC17-004




Battery box AT00-024

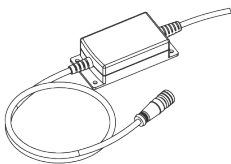

Power supply AT00-029

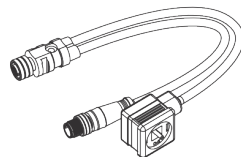

Y Splitter AT00-037

 

Optional T connector
AT00-036

These instructions relate to the use of the touch-free automatic tap systems only, any external or 'add-on' parts will be supplied with separate instructions. Appropriate personal protective equipment must be worn when installing, calibrating and commissioning this product.

It is recommended that the electrical part of the installation be carried out by a qualified electrician in accordance with the latest electrical regulations. It is also recommended that any plumbing is carried out by a qualified plumber.

This is an electronic device which must be installed correctly to perform correctly.

If the appliance is used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, they must be given adequate supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

.....

1. Installation

EN Installation
FR Montage
ES Montaje
IT Montaggio

NL Montage
PL Montaż
SV Montering

CS Montáž
FI Asennus
RU Монтаж



1

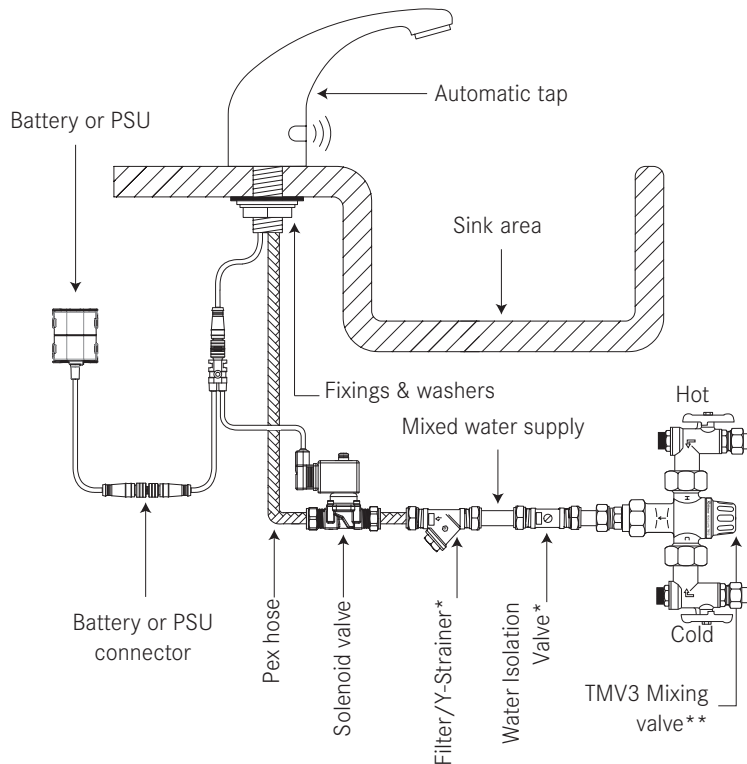


Fig. 1

Caution! For mains powered setups you must use the AT00-029 power supply unit. Do not attempt to use any other device or power supply system. Ensure the battery box or power supply is left disconnected at this stage.

Standard Setup

2

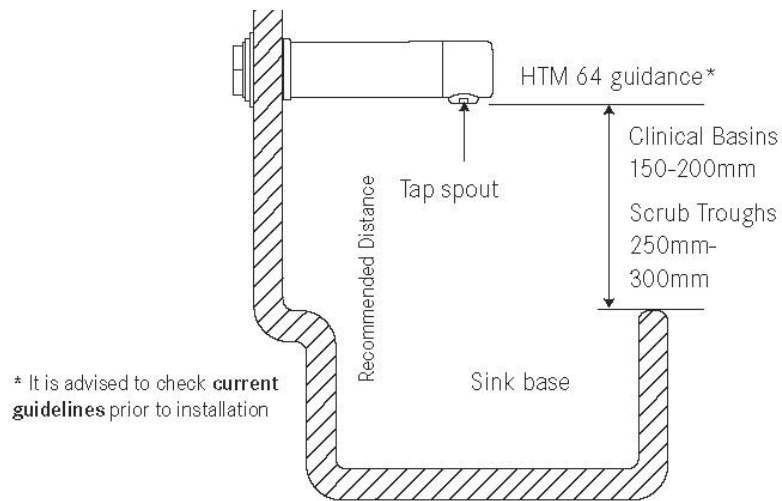


Fig. 2

A maximum of three taps should be run from a single PSU.

Note for Multiple Installation kits:

2 Station Kits contain one AT00-036.

3 Station Kits contain two AT00-036's and one AT00-033 extension.

Important installation details for wall mount taps to avoid reflection problems.

The minimum recommended distance from the tap spout to the sink base is normally 250mm for basins or 300mm for troughs. This will be greater if there is excessive reflection which can be caused by bright surfaces such as chromed wastes and/or bright lights mounted above the basins.

3

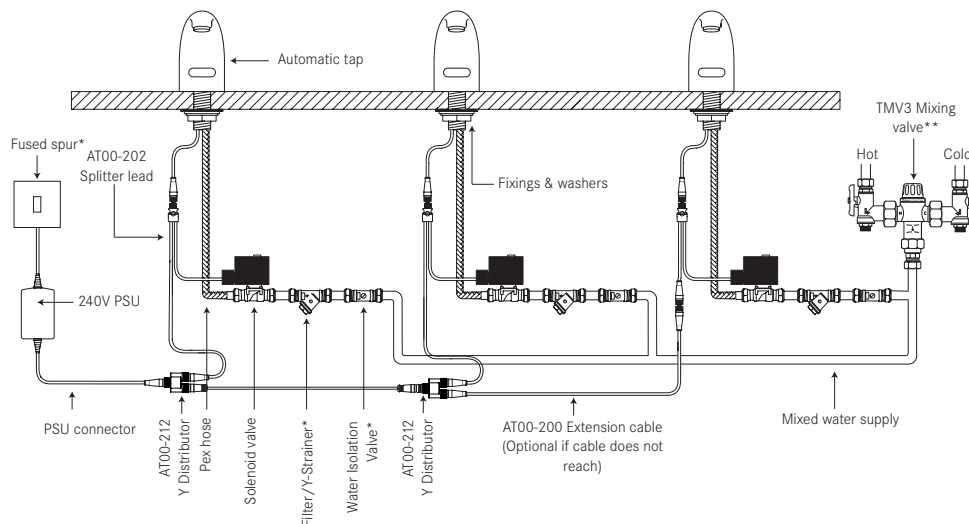


Fig. 3 Multiple set up

*Not supplied. Can be ordered separately.

**Not supplied. Required for warm water output and to comply with current water byelaws. Can be ordered separately from KWC DVS.

Pressure Notes: All automatic taps come standard with a 12.7mm solenoid valve which requires 1 BAR to operate. If the water pressure is less than 1 BAR, low pressure valves should be fitted - To contact KWC DVS technical support please refer to page 11.

4

You must read these instructions thoroughly before attempting to install this tap. First check the solenoid valve supplied is suitable for the sites water pressure and conditions.

The standard valve requires 1 - 10 BAR water pressure and 5 - 55°C water temperature. If your water pressure is low (1.0 BAR or less) low pressure valves should be obtained from your supplier. See Section 8: General Cleaning.

Pre-Fitting

First turn off the water supply. If possible select an upright position for the solenoid valve. Check correct water flow direction on installation of the solenoid valve. The fitting of an isolator and Y Strainer (AC03-019) prior to the solenoid valve is highly recommended (not supplied).

All infra-red taps can be affected by highly reflective surfaces. Avoid mounting too close to reflective surfaces or direct sunlight.

IMPORTANT: Before installing the tap itself, please be aware that wherever possible you must use the anti-rotation pins supplied for the tap base. Non-use of the anti-rotation pins in suitable areas can result in void of warranty.

5

IMPORTANT: Plumbing compound should not be used to seal the pipework as oils leaching from the compound will prevent the solenoid valve from functioning correctly.

Cut the pipework with a plumbers pipe cutter, remove sharp edges and burrs. The diaphragm in the solenoid valve will be damaged by oil, grease and debris. The valve should be used on oil free pipework only.

To prevent long term contamination the pipework must be thoroughly purged prior to fitting the solenoid valve. Fit the isolator, Y strainer and solenoid valve and ensure pipes are fully engaged in joints.

Take care that the valve is fitted with the correct direction of flow as indicated on the valve. Be careful not to over tighten any joints.

For mixed water output, a TMV mixing valve is needed to safely control the hot water temperature. See Fig.1 'Standard Setup' for typical TMV installation.

Fit the automatic tap to the required position. Secure the tap with the nut and washers provided and connect pipework from the solenoid valve and turn on the water supply, checking for leaks.

6

Caution! Mount the battery box or power supply with care, in a dry location, away from extremes in temperature and not exposed to dirt, dust or damp.

Ensure the battery box or power supply is left disconnected at this stage.

Electrical cable connection for Power Supply Unit (PSU)

It is recommended that the electrical part of the installation be carried out by a qualified electrician in accordance with the latest electrical regulations.

A 1m length of 0.5mm 2 core flex is supplied with the PSU - this must not be extended.

Each PSU should be connected separately via a 3 amp fused spur. The PSU must be permanently connected to the supply. A suitable means of disconnection should be provided, in accordance with local electrical regulations.

If the mains lead becomes damaged, the product should not be used. Contact KWC DVS for replacement parts.

NOTE: Incorrect fuses may void warranty.


7

Ensure all cable sockets and plug connections are clean and dry, then connect the tap to the split connector and solenoid valve firmly, ensuring all connections are secured tightly.

Connect the battery pack or power supply unit to the remaining split connector socket.

Once the tap is powered up, allow 30 seconds for the sensor to calibrate. Attempting to operate the tap within this period may cause the sensor to false trigger.

If false triggering occurs, disconnect power for 1 minute, then reconnect and allow the sensor to calibrate.

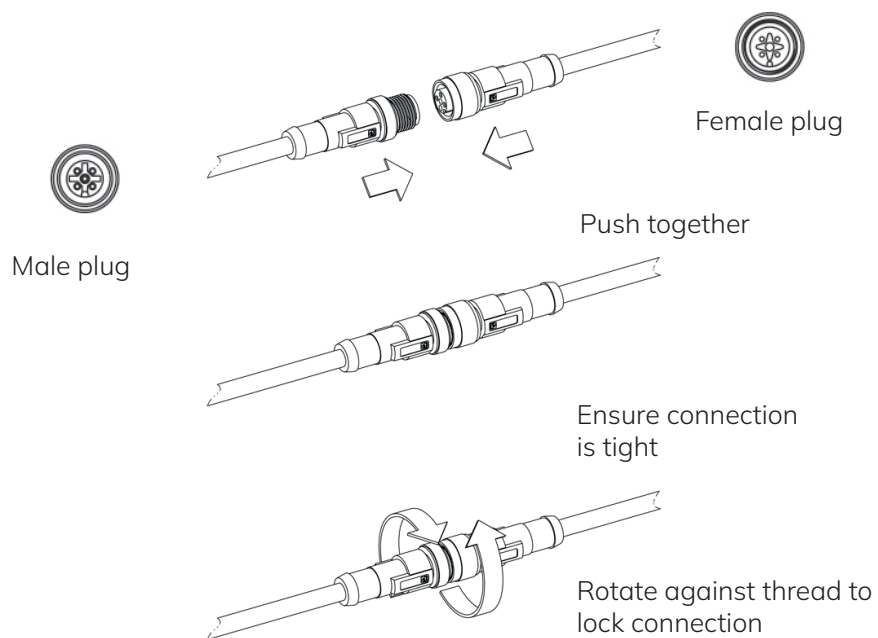**Fig.4**

Plug and Socket Connections

Optional extension cables (1, 2 and 3 metre) are all available from the manufacturer to extend the low voltage output of the PSU to the vicinity of the taps. See Section 8: General Cleaning.

2. Fault finding

EN Installation	NL Opsporen van fouten	CS Hledání závad
FR Recherche de défaut	PL Wykrywanie usterek	FI Hledání závad
ES Localización de averías	SV Felsökning	RU Поиск неисправностей
IT Ricerca guasti		



Tap will not operate

- Check all connections (see fig. 4)
- Check fuse (Mains/PSU model only) max 30amp fuse
- Voltage too low. Check tap input voltage (PSU output voltage - 6v DC).
- Voltage too low. Replacement battery code AT00 - 026 (CRP2 or DL223A) Lithium Cell only.
- Check / Clean all connectors (shown in Fig 3).
- Check for cable damage.
- Check water is turned on.
- Check the solenoid valve is fitted correctly.
- Check valve operation.
- Check for dirt or debris in the solenoid valve.
- Water pressure is too high.
- For mains/PSU and battery models, disconnect for 1 minute then reconnect and allow sensor to recalibrate.

Tap operates in reverse

- (Water runs when hand is moved away from sensor areas and stops when returned to sensor area)
- Reversed valve polarity (contact KWC DVS)

Tap operates intermittently

- Clean sensor lens (with nonabrasive materials only).
- Tap may be installed too close to an R.F. interference source).
- Tap may be installed too close to very bright lighting or highly reflective surfaces.
- Water pressure too low for valve to operate reliably (minimum 1.0 BAR required) for standard solenoid valves.
- Voltage too low. Check tap input voltage (PSU output voltage - 6v DC).
- Voltage too low. Replace battery, CRP2 or DL223A Lithium Cell only.
- For mains/PSU and battery models, disconnect for 1 minute then reconnect and allow sensor to recalibrate.

3. Cleaning

EN Cleaning
FR Nettoyage
ES Limpieza
IT Pulizia

NL Schoonmaak
PL Czyszczenie
SV Rengöring

CS Čištění
FI Puhdistus
RU уборка



IMPORTANT: Do not use abrasive materials or cleaners. Only use soap and water or nonabrasive cleaners.

Valve servicing

The valve will require periodical servicing and cleaning, please contact manufacturer for servicing.
Do not attempt to dismantle the valve if you are unfamiliar with electronic solenoid valves.

Optional Parts

AC03-019 - Standard 'Y' strainer - 15mm compression
AC17-004 - Low pressure 0-1.0 Bar 6V 4mm solenoid valve
AT00-033 - 1m PSU cable extension
AT00-034 - 2m PSU cable extension
AT00-035 - 3m PSU cable extension

4. Warranty

EN Installation
FR Garantie
ES Garantía
IT Garanzia

NL Garantie
PL Gwarancja
SV Garanti

CS Záruka
FI Takuu
RU Гарантия



Warranty

The automatic tap spout, lead system and PSU is guaranteed for 2 years from purchase against defective material and assembly.

The solenoid valve is guaranteed for 12 months, subject to water condition, however it is expected that the valve internals will operate efficiently for many years.

Support

For technical support please visit our technical pages on our website at www.dartvalley.co.uk or contact us by e-mail at kwcdvstechsupport@kwc.com. Alternatively, you can telephone us direct on 01803 529021 and our customer service team will be pleased to help you.

Disposal of electrical and electronic equipment

The use of this crossed out wheeled bin logo indicates that this product needs to be disposed of separately to any other household waste.

Within each of the European Union member countries, provisions have been made for the collection and recycling of unwanted electrical and electronic equipment. Outside of the EU it will be necessary to dispose of this product at your local community waste collection or recycling centre. In order to help preserve our environment we ask that you dispose of this product correctly. Please contact your local council for collection centre details.

Disposal of waste batteries

The use of this crossed out wheeled bin logo indicates that the battery needs to be disposed of separately to any other household waste.

Within each of the European Union member countries, provisions have been made for the collection and recycling of waste batteries. Outside of the EU it will be necessary to dispose of this product at your local community waste collection or recycling centre.

In order to help preserve our environment we ask that you dispose of this battery correctly. Please contact your local council for collection centre details.

Australia

PR Kitchen and
Water Systems Pty Ltd
Dandenong South VIC 3175
Phone +61 3 9700 9100

Austria

KWC Austria GmbH
6971 Hard, Austria
Phone +43 5574 6735 0

**Belgium, Netherlands &
Luxembourg**

KWC Aquarotter GmbH
9320 Aalst; Belgium
Phone +31 (0) 492 728 224

Czech Republic

KWC Aquarotter GmbH
14974 Ludwigsfelde, Germany
Phone +49 3378 818 309

France

KWC Austria GmbH
6971 Hard, Austria
Phone +33 800 909 216

Germany

KWC Aquarotter GmbH
14974 Ludwigsfelde
Phone +49 3378 818 0

Italy

KWC Austria GmbH
6971 Hard, Austria
Numero Verde +39 800 789 233

Middle East

KWC ME LLC Ras Al Khaimah,
United Arab Emirates
Phone +971 7 2034 700

Poland

KWC Aquarotter GmbH
14974 Ludwigsfelde, Germany
Phone +48 58 35 19 700

Spain

KWC Austria GmbH
6971 Hard, Austria
Phone +43 5574 6735 211

Switzerland & Liechtenstein

KWC Group AG
5726 Unterkulm, Switzerland
Phone +41 62 768 69 00

Turkey

KWC ME LLC Ras Al Khaimah,
United Arab Emirates
Phone +971 7 2034 700

United Kingdom

KWC DVS Ltd - Northern Office
Barlborough S43 4PZ
Phone +44 1246 450 255

KWC DVS Ltd - Southern Office
Paignton TQ4 7TW
Phone +44 1803 529 021

EAST EUROPE

Bosnia Herzegovina
Bulgaria | Croatia
Hungary | Latvia
Lithuania | Romania
Russia | Serbia | Slovakia
Slovenia | Ukraine

KWC Aquarotter GmbH
14974 Ludwigsfelde, Germany
Phone +49 3378 818 261

SCANDINAVIA & ESTONIA

Finland | Sweden | Norway
Denmark | Estonia

KWC Nordics Oy
76850 Naarajärvi, Finland
Phone +358 15 34 111

OTHER COUNTRIES

KWC Austria GmbH
6971 Hard, Austria
Phone +43 5574 6735 0

