

Maintenance - Classic & Aquarius range

It is recommended that the taps are inspected at least once a year to ensure efficiency and reliability. In hard water areas, more frequent inspections may be required depending on the severity of the scale build up.

Multiple Setup

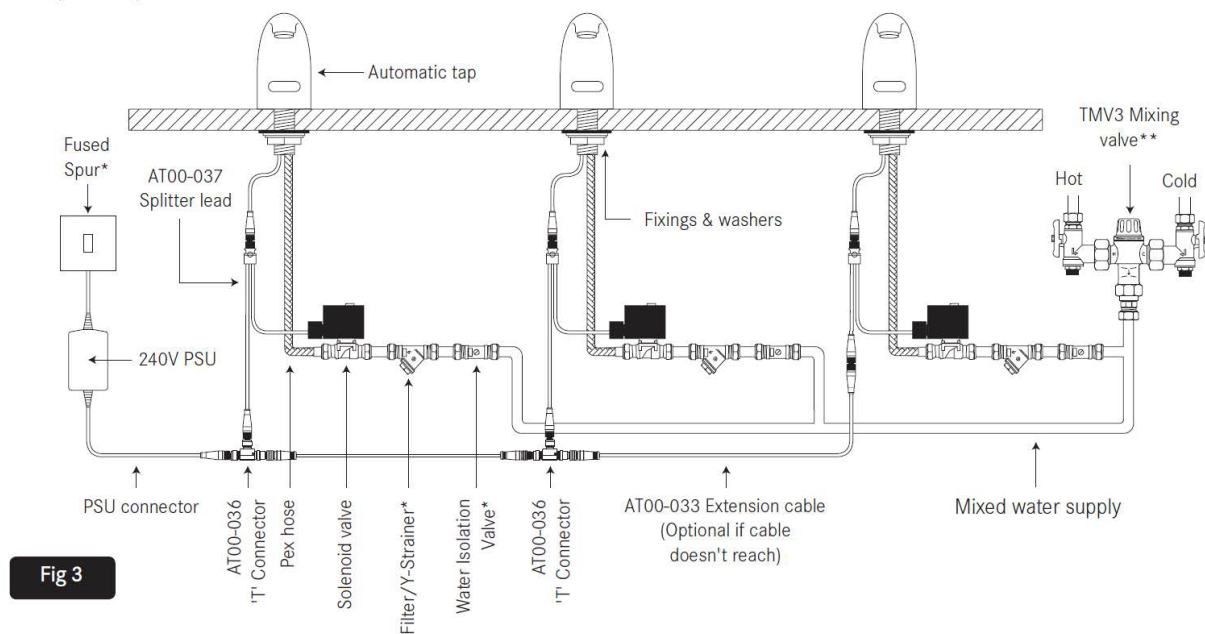


Fig 3

Solenoid valve

- Check operation of the solenoid valve by activating the tap sensor.
- If the valve is letting by, check the solenoid valve referring to the cleaning instructions. If there is a scale build, the diaphragm may need replacement. In severe cases the entire solenoid valve may need to be replaced.
- Clean all in-line filters, including within the Thermostatic Mixing Valve (TMV) depending on model.

Cables

- Inspect all cables for damage. Replace if required
- Check cable connections for corrosion. Replace if required

Tap outlet

- Tap outlets should be replaced periodically or de-scaled. Frequency will depend on site conditions and requirements. Part no. AT00-013 - 5lpm Standard Flow straightener.

Cleaning

- It is important not to use abrasive cloths or abrasive cleaning fluids.
- We recommend warm soapy water and a non-abrasive cloth or sponge, always rinsing with clean water.

