



IC07-006



**Parts Supplied:**

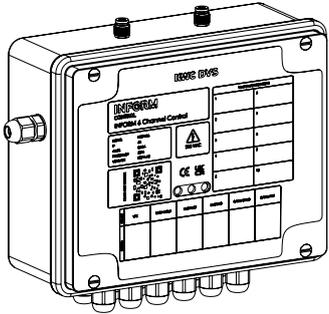


INFORM 6 Channel Control Box

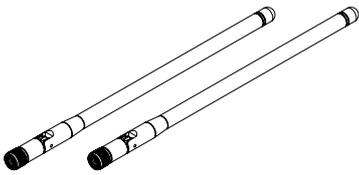

Antennas (Pair)


**Mandatory Parts (Supplied Separately):**

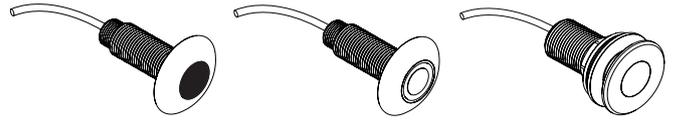

12V Sensor or Tactile Button or CMVL8 Sensor




12V Anti-Microbial Solenoid Valve

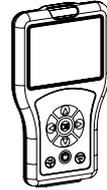


Hand Held Programmer


**Supplementary Parts (Supplied Separately):**

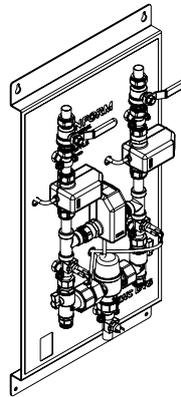


CMVL8

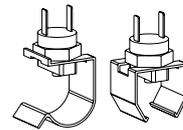

Thermistor Clips

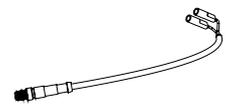


Thermistor Cables \*varied lengths

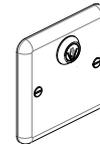


Key Switch



WC Flush Valve

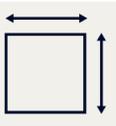

**Dimensions (mm)**

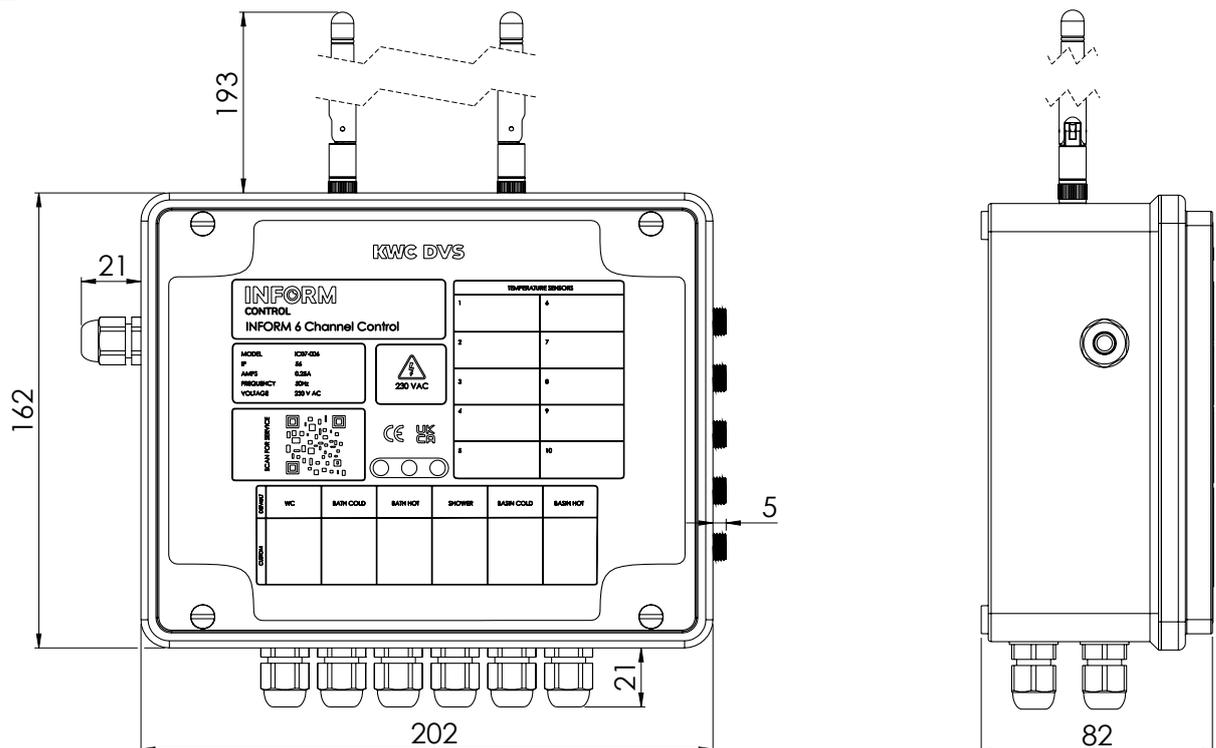



These instructions relate to the use of the INFORM 6 Channel Control Box only, any additional KWC parts will be supplied with separate instructions.

The electrical part of the installation **MUST** be carried out by a qualified electrician in accordance with the latest electrical regulations. It is also recommended that any plumbing is carried out by a qualified plumber.

For proper performance, this sophisticated electronic device must be installed correctly.

**IMPORTANT:** Please read these instructions carefully and follow each stage in order.

**SERVICING, INSTALLATION & WARRANTY:**

KWC DVS products installed or commissioned by our engineers receive a five-year on-site warranty. Utilizing a KWC DVS service option for most products will extend the warranty period.

**SUPPORT:** For Technical Support please visit our technical pages on [www.dartvalley.co.uk](http://www.dartvalley.co.uk)

Or

**CONTACT US:**

KWC DVS Ltd  
Northern Office: +44 (0)1246 458900  
Southern Office: +44 (0)1803 529021

scan  
for  
support




---

The INFORM team must be contacted prior to the IC07-006 being powered up to confirm all information required to register the INFORM 6-channel control box on the INFORM dashboard has been provided.

Failure to do so may incur additional costs. If you are unsure if this information has been passed over, please contact [dvsinform.gb@kwc-professional.com](mailto:dvsinform.gb@kwc-professional.com) to confirm.

# 1. Installation

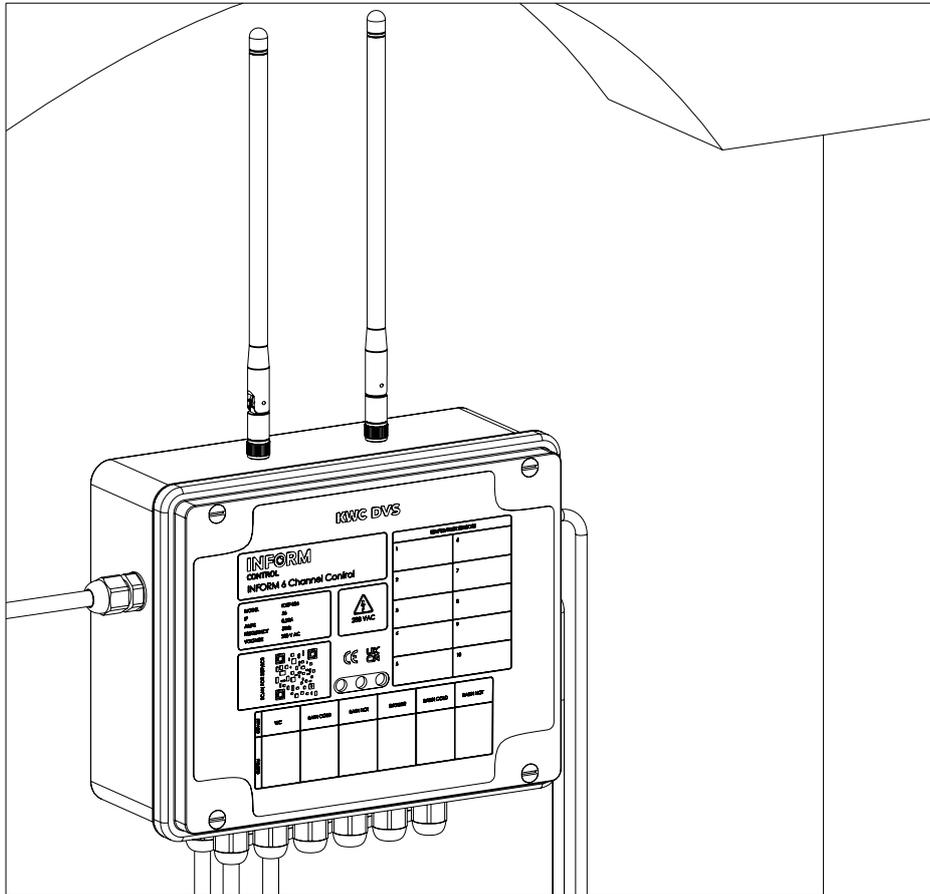

Above illustration for visual representation only.

Vertical antenna positioning recommended when installed.

Control box should not be installed adjacent to mains supply.

## Safety

- CAUTION! 220-240V A.C.
- NEVER open the cover with the supply live.
- DO take care not to disturb ribbon cable when opening enclosure.
- DO NOT extend cables.
- DO NOT leave badly fitted cables.
- DO NOT leave slack cables in the enclosure.
- DO NOT interfere with the mains flex.
- DO check all cables and connections.
- DO ask for advice if/when necessary. **Via email - [dvstechsupport@kwc-professional.com](mailto:dvstechsupport@kwc-professional.com)**

The Control System Box should be located in a dry location and not exposed to dirt, dust or damp.

The unit should be installed in an accessible location, for example a service cupboard or secure duct, away from unauthorized access.

Ensure IR Port remains accessible for adjustment of settings and maintenance. (See **page 8** for IR port location).

## 1.1. Installation Continued

---

The control unit is not designed for direct surface mounting into washroom areas.

Never open the cover with the supply live. The routes that cables will take when connecting external equipment to the control unit should also be planned at this stage.

The mains supply should NOT be initiated until all external equipment has been installed and wired. Connect the mains supply lead to a 230V a.c. supply via a fused spur, the fuse rating should be 3 Amps. (Not supplied).

The unit should be securely fixed in a suitable location in a horizontal orientation with the glands pointing down, so that the front label can be read correctly.

The Antennas must be pointed vertically to enable best signal strength.

A clearance perimeter of 150mm around the control box is recommended.

Open lid to expose four fixing holes around the edge of the enclosure. These holes allow the fastening of the unit without removing the printed circuit board. Mark the wall through these fixing holes and fix the control unit with suitable fixings.

Always read instructions supplied with components and ensure that only KWC DVS supplied equipment is connected to the control box.

Valve cables should enter the enclosure from the front row of cable glands. The sensor cables should enter the enclosure through the back row of cable glands. It is recommended to connect sensor cables prior to valve cables for ease of installation and neatness. Cables should not be left too taut when secured by the cable gland.

### **Tidy and Organized:**

Cables should be neatly routed and secured, avoiding tangles or excessive wire crossing. Use cable ties or other suitable methods to group and secure wires where appropriate.

### **No Stress or Strain:**

Ensure that no cables are under tension or stress, especially where they connect to terminals or components. Leave a small amount of slack to prevent strain on connections due to vibration, temperature changes, or accidental tugging.

### **Minimise Excess Cable:**

While some slack is beneficial, excessive lengths of cable coiled or bundled inside the control box should be avoided. Long, unused lengths can impede airflow, make future troubleshooting difficult, and increase electromagnetic interference. Trim cables to the appropriate length before termination.

### **Plug Connections:**


Ensure the plugs are disconnected from the mating socket before connecting wires.

When wiring in a sensor, ensure that the cables are connected correctly as per the label on the plug.

**Note: Valve plugs have no polarity and therefore can be connected in any orientation.**

When all connections are made and checked, replace the lid and secure.

## 2. Control Box Overview

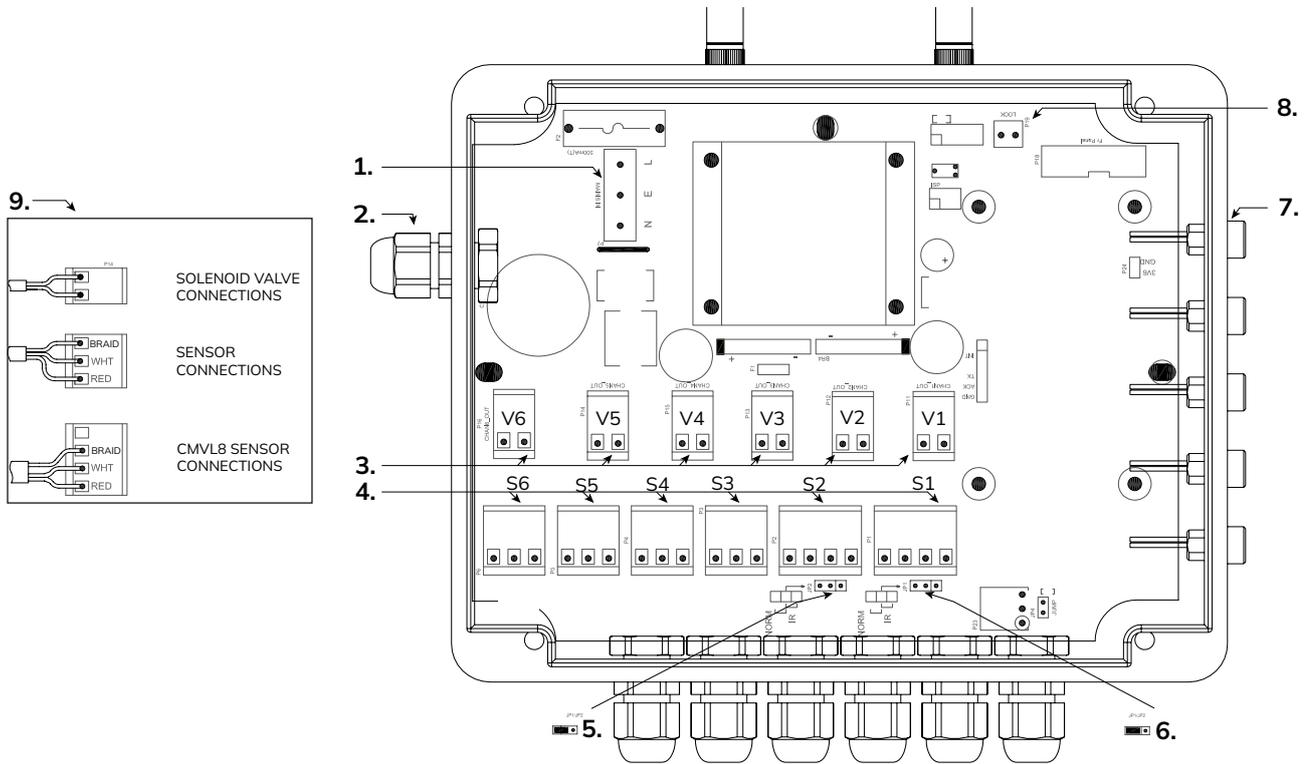

### Key

1. Mains In
2. Mains In Gland
3. Valve Connections V1-V6.
4. Sensor Connections 1-6 (**Ensure wiring colours match labels on plug as per point 9 above**).
5. Sensor 2 Jumper. (**Do not move, only for use with CMVL8**).
6. Sensor 1 Jumper. (**Do not move, only for use with CMVL8**).
7. Thermistor Connections.
8. Key Switch Connection.
9. Valve / Sensor Connection Illustrations.

Recommended - Valve Cable Entry (front row glands) and Sensor Cable Entry (back row glands).

### Safety

- CAUTION! 220-240V A.C.
- NEVER open the cover with the supply live.
- DO take care not to disturb ribbon cable when opening enclosure.
- DO NOT extend cables.
- DO NOT leave badly fitted cables.
- DO NOT leave slack cables in the enclosure.
- DO NOT interfere with the mains flex.
- DO check all cables and connections.
- DO ask for advice if/when necessary. **Via email - [dvstechsupport@kwc-professional.com](mailto:dvstechsupport@kwc-professional.com)**

### Default Channel Settings;

1. BASIN HOT
2. BASIN COLD
3. SHOWER
4. BATH HOT
5. BATH COLD
6. WC

Channels 1-6 can be reprogrammed to any product that uses a solenoid valve to control the water supply.

**(When using Flushvalve, ONLY connect to channel 6)**

The channel naming area on the front of the control box should be labelled to keep track of thermistor cables, product locations, and any custom configurations.

### Jumper Configurations.

- Default configuration is for use with standard 6 channel set up.
- Jumper Position can be changed to enable use with CMVL8.

DEFAULT JUMPER POSITIONS



CMVL8 JUMPER POSITIONS



## 2.1. Control Box Overview Continued

### Temperature Ports

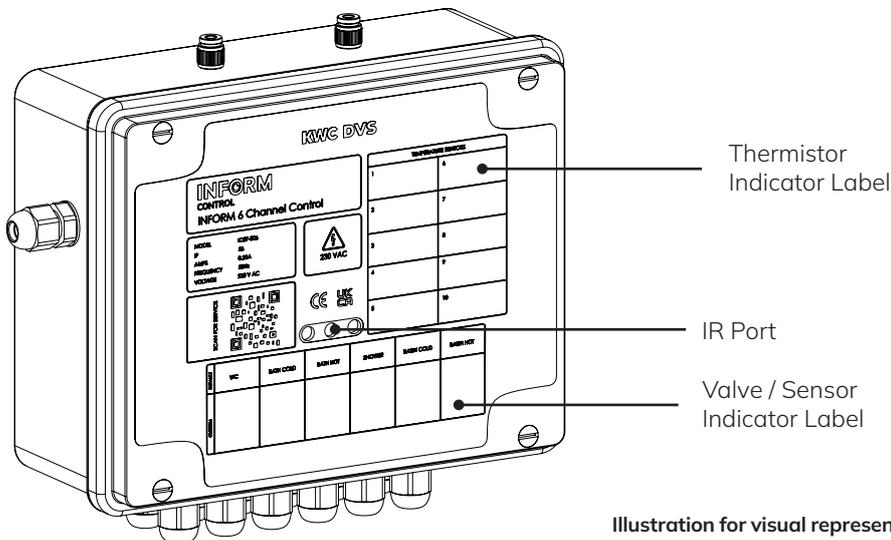
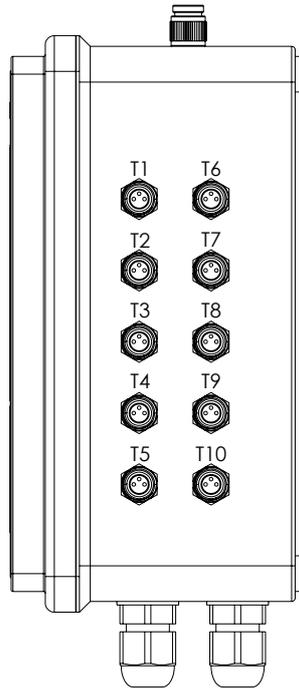


Illustration for visual representation only.

Vertical antenna positioning recommended when installed.

- When connecting to mains always make sure that the lid is tightly closed and secure.
- After all external equipment is installed, the mains supply can be switched on.
- NEVER open the cover with the supply live.
- When the control unit is first powered on, allow 5-10 minutes for the control box to initialize and complete verification period.
- Upon powering the control box on, the LED within the IR port should flash continuously until it has made a successful network connection. Upon making a network connection, the LED will remain solid.
- If the LED instantly goes solid without flashing, please use the handheld programmer to check the device type and make sure it is set to 6CH+Temp or 6CT depending on the firmware for the handheld programmer.

### 3. Program Menu's


	DEFAULT SETTINGS	OPTIONAL SETTINGS
<b>WAVE FLUSH VALVE MENU</b>		
Flush type	Single	Single or dual
Flush time(s)	4 seconds	2, 2.5, 3, 3.5, 4, 4.5, 5, 5.5, 6, 6.5 seconds
Range	2	1-3
Automatic purge	OFF	OFF, 3, 6, 12, 24, 36, 48, 72 hours
Purge run time	4 seconds	2, 3, 3.5, 4, 4.5, 5, 5.5, 6, 6.5 seconds
Lock outs	OFF	OFF, 2 - 10 Ops
<b>TAP MENU</b>		
Run time	2 seconds	2, 5, 10, 15, 20, 30 seconds
Sensor range	5	1-10
Wave on/off operation	OFF	ON/OFF
Anti-vandal time	1 minute	30 seconds, 1, 2, 4, 8 minutes
Automatic purge	OFF	OFF, 3, 6, 12, 24, 36, 38 hours
Purge run time	1 minute	30 seconds, 1, 2, 4, 8 minutes
Lock outs	OFF	OFF, 4, 6, 8, 10, Ops
<b>SHOWER MENU</b>		
Run time	1 minute	30 seconds, 1, 2, 3, 4, 5 minutes
Sensor range	2	1-3
Wave on/off operation	OFF	ON/OFF
Anti-vandal time	Run + 10s	Run + 10s
Automatic purge	OFF	OFF, 3, 6, 12, 24, 36, 38 hours
Purge run time	1 minute	30 seconds, 1, 2, 4, 8 minutes
Lock outs	OFF	OFF, 4
<b>BATH MENU</b>		
Run time	2 minutes	1, 2, 3, 4, 8, 10 minutes
Sensor range	2	1-3
Wave on/off operation	OFF	ON/OFF
Anti-vandal time	Run + 10s	Run + 10s
Automatic purge	OFF	OFF, 6, 12, 24, 36, 48, 72 hours
Purge run time	1 minute	30 seconds, 1, 2, 4, 8 minutes
Lock outs	OFF	OFF, 2, 4, 6, 8 Ops

\*program menu's for example only, please refer to hand held programmer instructions.

To adjust settings...

1. Program the INFORM 6 Channel Control Box; (Channel by channel, adjust the settings).
2. Hold the Programmer up to the IR Port on the control box (see image to the right).
3. Press and hold the 'Read Button' to load the control box's current settings. **(Green tick will be displayed when read is complete).**
4. Choose your required settings from the displayed menu's.
5. Once settings are selected, press and hold the 'Send Button' this will program the control box with your selected settings. **(Green tick will be displayed when complete).**
6. The control box LED will start a flashing sequence before turning solid. If the LED does not undergo a flashing sequence, this step will need to be repeated.

Read Button   Send Button

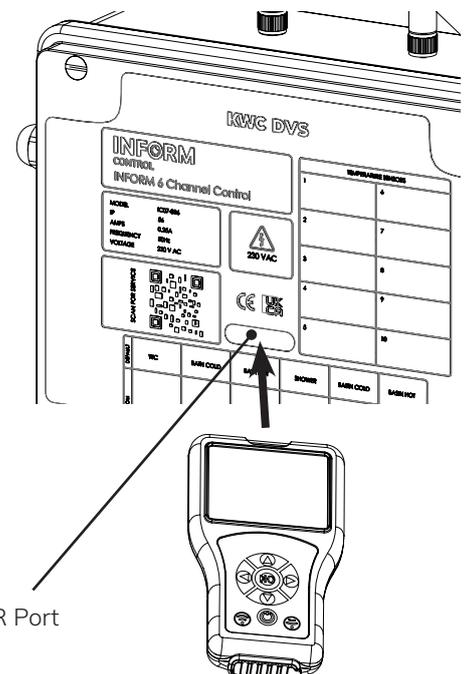

\*For full Hand Held Programmer instructions, please refer to the AC01-001 operating instructions, available on [www.dartvalley.co.uk](http://www.dartvalley.co.uk) or via our sales team.

## 4. Key Switch

The optional key switch is used manually to disable the control box when required.


When key switch is ON, all outlets will be closed and disabled. All current operation is cancelled, all lockouts are cleared and purging is reset.

Normal operation is resumed by turning the key switch off.

The cancel feature is only available during 'normal' use, not during any other program routine.

Connect the blue and brown lead from the key switch to the correct position on the connector plug as illustrated in the diagram.

For board annotation descriptions, please refer to **page 6**.

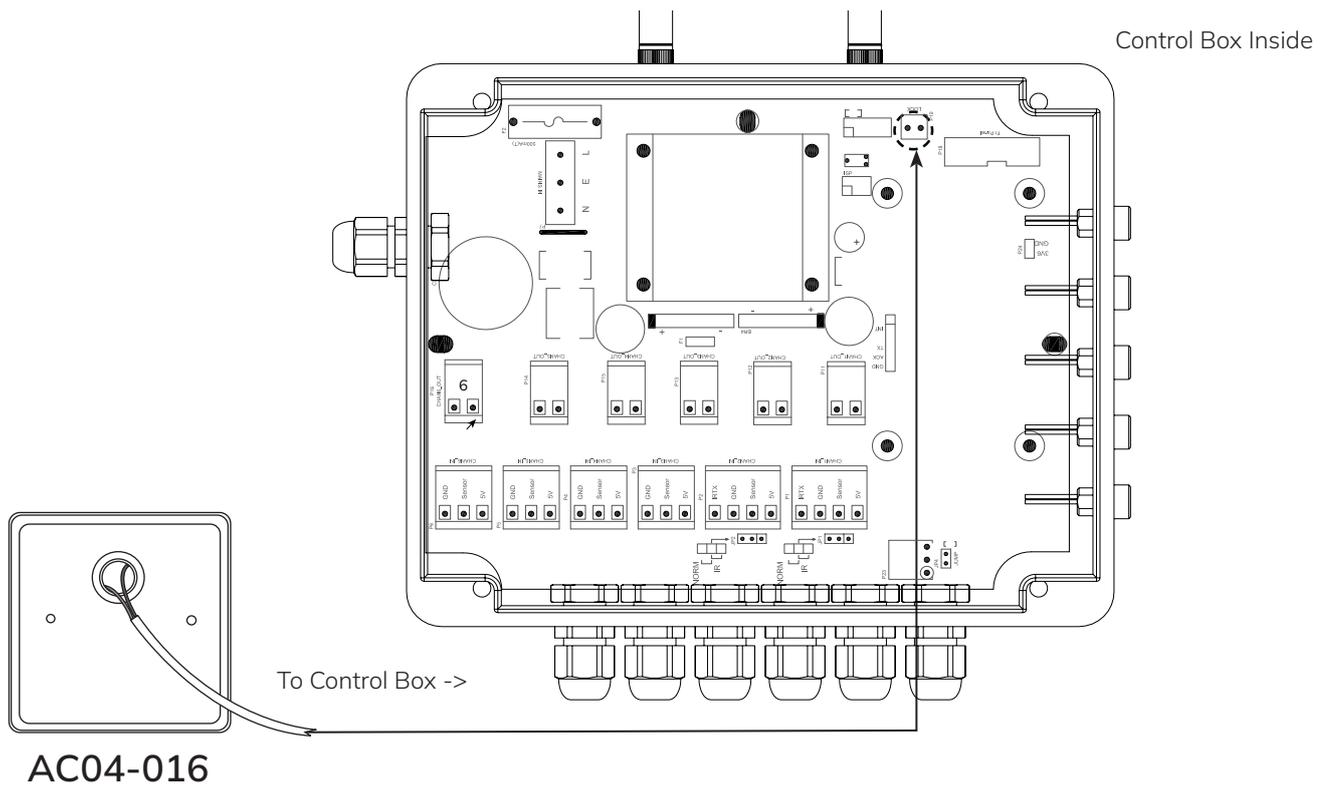

## 5. Product disposal

---



The use of this crossed out wheeled bin logo indicates that this product needs to be disposed of separately to any other household waste.

Within each of the European Union member countries, provisions have been made for the collection and recycling of unwanted electrical and electronic equipment. Outside of the EU it will be necessary to dispose of this product at your local community waste collection or recycling centre.

In order to help preserve our environment we ask that you dispose of this product correctly. Please contact your local city council for collection centre details and always check UK electronic waste disposal regulations before disposing of this product.

**Australia**

PR Kitchen and  
Water Systems Pty Ltd  
Dandenong South VIC 3175  
Phone +61 3 9700 9100

**Austria**

KWC Austria GmbH  
6971 Hard, Austria  
Phone +43 5574 6735 0

**Belgium, Netherlands &  
Luxembourg**

KWC Aquarotter GmbH  
9320 Aalst, Belgium  
Phone +31 (0) 492 728 224

**Czech Republic**

KWC Aquarotter GmbH  
14974 Ludwigsfelde, Germany  
Phone +49 3378 818 309

**France**

KWC Austria GmbH  
6971 Hard, Austria  
Phone +33 800 909 216

**Germany**

KWC Aquarotter GmbH  
14974 Ludwigsfelde  
Phone +49 3378 818 0

**Italy**

KWC Austria GmbH  
6971 Hard, Austria  
Numero Verde +39 800 789 233

**Middle East**

KWC ME LLC Ras Al Khaimah,  
United Arab Emirates  
Phone +971 7 2034 700

**Poland**

KWC Aquarotter GmbH  
14974 Ludwigsfelde, Germany  
Phone +48 58 35 19 700

**Spain**

KWC Austria GmbH  
6971 Hard, Austria  
Phone +43 5574 6735 211

**Switzerland & Liechtenstein**

KWC Group AG  
5726 Unterkulm, Switzerland  
Phone +41 62 768 69 00

**Turkey**

KWC ME LLC Ras Al Khaimah,  
United Arab Emirates  
Phone +971 7 2034 700

**United Kingdom**

KWC DVS Ltd - Northern Office  
Barlborough S43 4PZ  
Phone +44 1246 450 255

KWC DVS Ltd - Southern Office  
Paignton TQ4 7TW  
Phone +44 1803 529 021

**EAST EUROPE**

Bosnia Herzegovina  
Bulgaria | Croatia  
Hungary | Latvia  
Lithuania | Romania  
Russia | Serbia | Slovakia  
Slovenia | Ukraine

KWC Aquarotter GmbH  
14974 Ludwigsfelde, Germany  
Phone +49 3378 818 261

**SCANDINAVIA & ESTONIA**

Finland | Sweden | Norway  
Denmark | Estonia

KWC Nordics Oy  
76850 Naarajärvi, Finland  
Phone +358 15 34 111

**OTHER COUNTRIES**

KWC Austria GmbH  
6971 Hard, Austria  
Phone +43 5574 6735 0

