KWC DVS

Automatic Soap Dispenser

INSTRUCTIONS

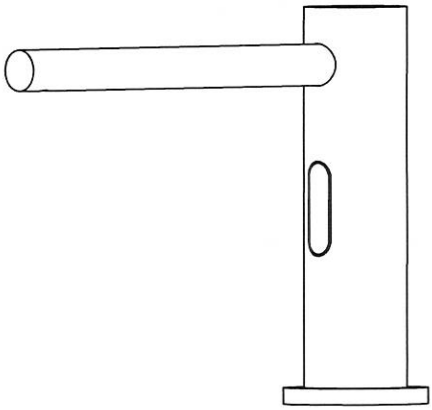

231120

Please read this manual carefully before use.....

Specifications:

Model No.	SO01-003/008
Material	Brass
Sensing range	Normal temperature
Activation time	0.5-1 s
Power supply	AC:220V DC:1. 5V 4pcs
Viscosity	100-3500cp (mpA • s)
Soap volume	::S2ml/times(four gear)
Bottle capacity	1. 6-2L
Ambient temp.	0-30cm

Ins ta llation:

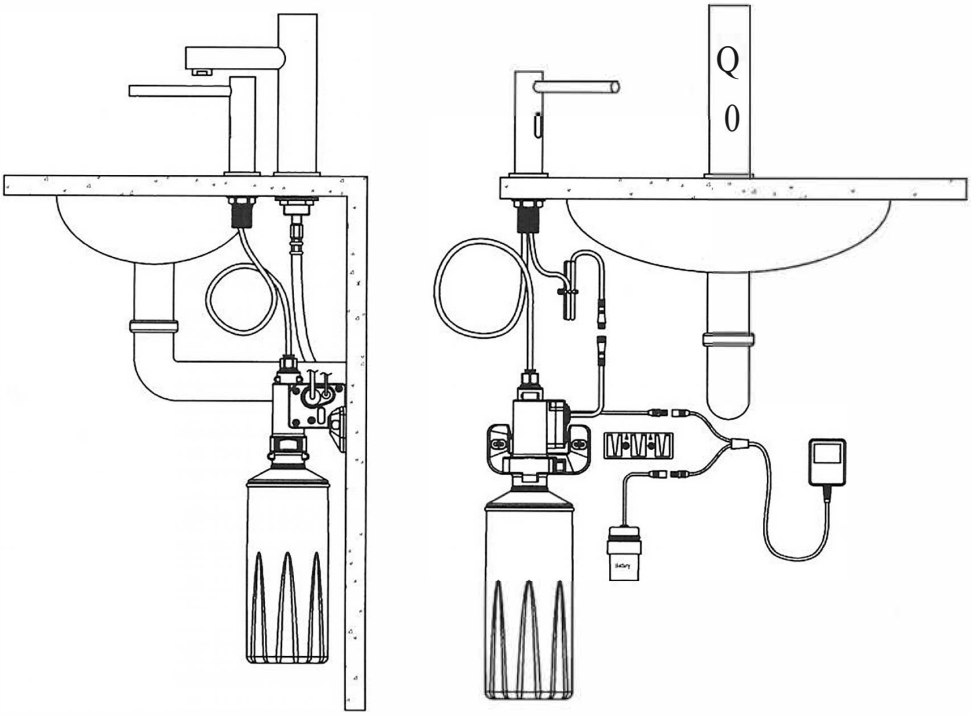

Roughing in:

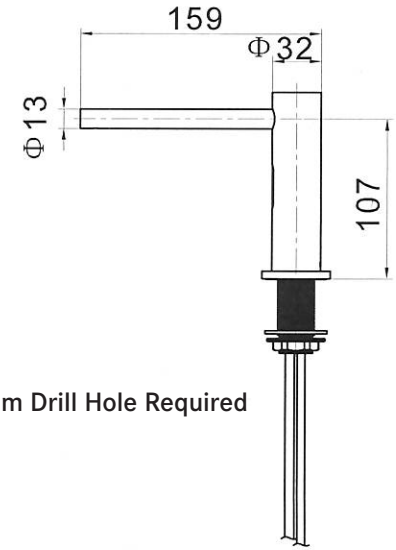

Ø25mm Drill Hole Required

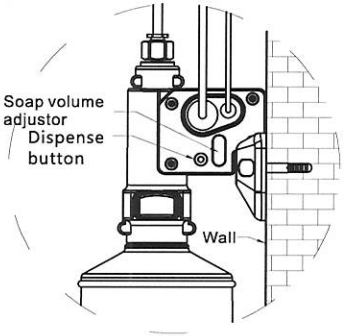

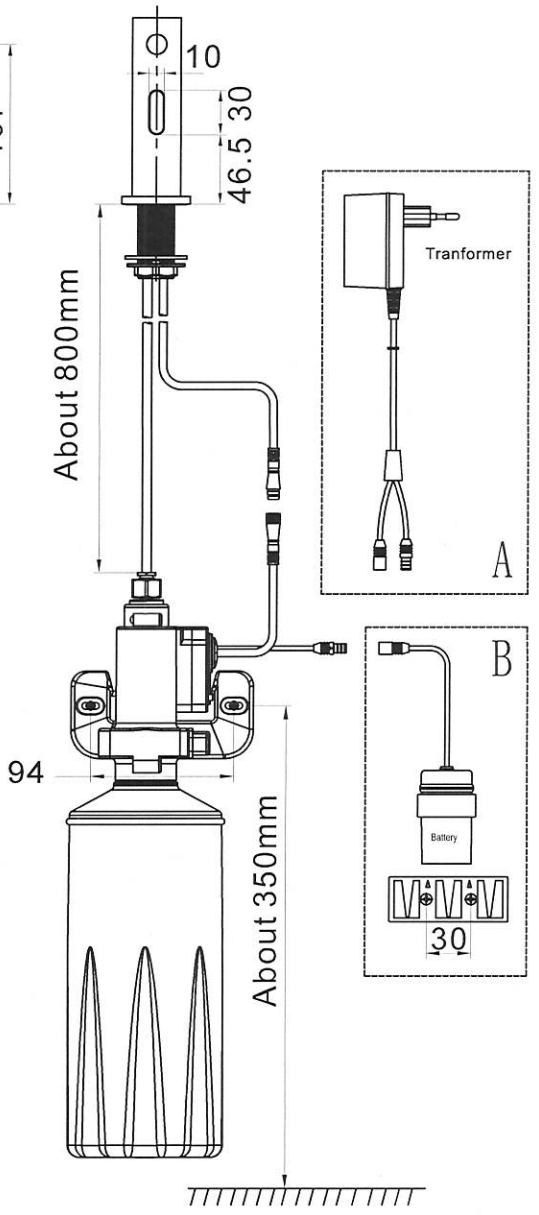

Installation steps:

1,Fill liquid soap into bottle capacity.
2,Press and hold the dispense button on the control box, release till the soap is dispensed.
3,Start the system by passing your hand in the sensor range, soap will dispense automatically.

Note: It has four soap dispense volume adjustment:
1: Low volume
2,Normal volume
3,Medium volume
4,High volume

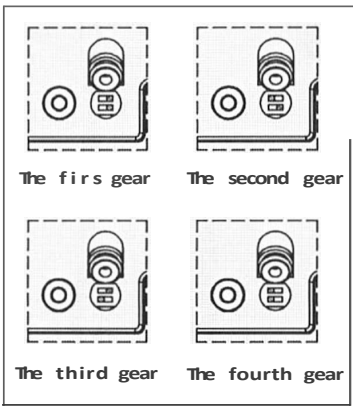

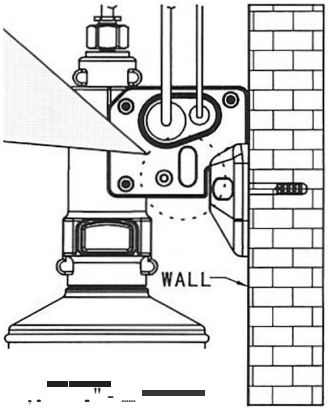

Caution:

1. Ensure soap is free of particles, and filling cup is clean.
2. Clean soap tank with water periodically.
3. Refill soap when soap level is approximately 20mm.
4. Replace batteries when red light in sensor window blinks.
5. Use soft and most cloth to clean, avoid spraying water directly at the system.