



Mark and fix the cistern bracket to the appropriate height using suitable fixings (not supplied).

\*not to scale

KWC DVS | Northern Office, 14 Napier Court, Barlborough, S43 4PZ, t +44 (0)1246 458900 | Southern Office, Kemmings Close, Paignton, Devon, TQ4 7TW UK t +44 (0)1803 529021 | kwcdvssales@kwc.com | www.dartvalley.co.uk

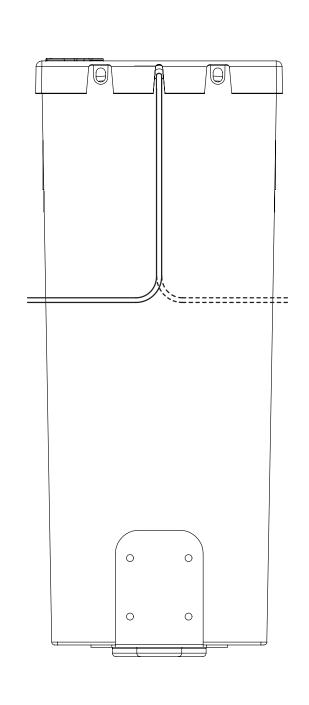

Position the base of the cistern on to the bracket fixed in the previous step, now ensure the flushvalve cable trails downwards **only** and exiting to the left or right (as above).

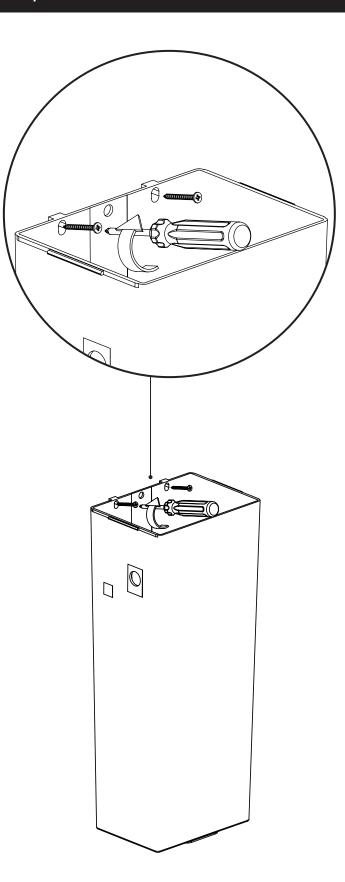

Mark through the 2 outer pre-drilled holes located in the back of the cistern, now secure using suitable fixings (not supplied).