



DELABIE | DVS

Safe Ensuite High Security Back-to-Wall WC Pan with Infill Installation instructions

VR01-013 - WC Pan with LH Infill
VR01-014 - WC Pan with RH Infill

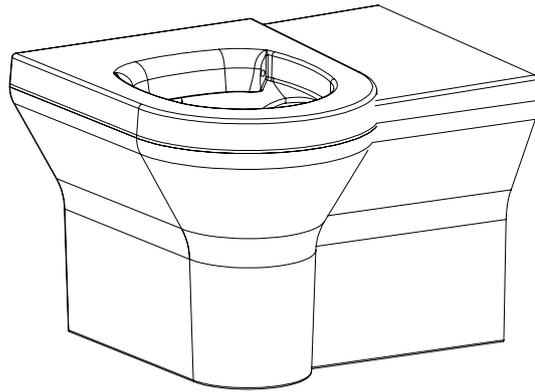


Step 1

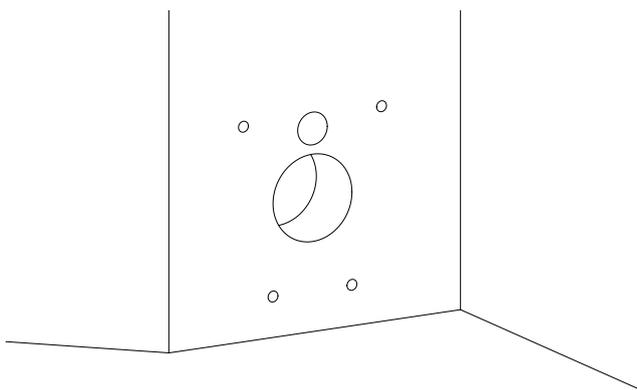


Use the drilling template provided mark and drill holes for the inlet, waste and fixing studding.

Step 2

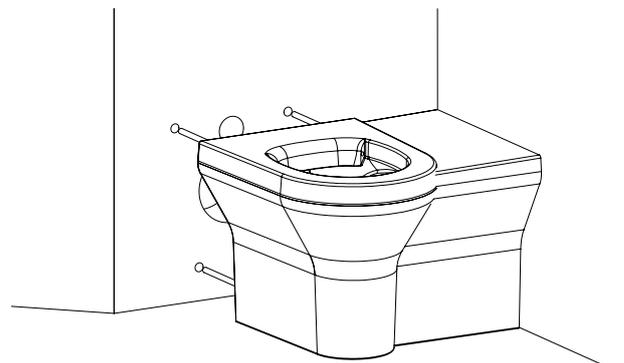


Screw the M12 studding into the back of the pan as far as possible. Make sure a flush pipe cone and outlet connector is fitted in the back of the pan. Align the pan with fixing holes.

Step 3

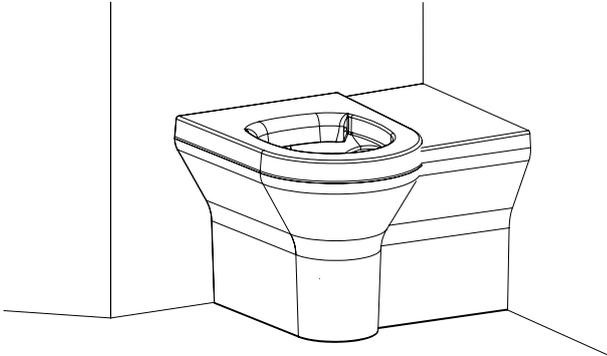


Place the pan against the wall so all the fixing studs protrude through into the service duct.

Step 4

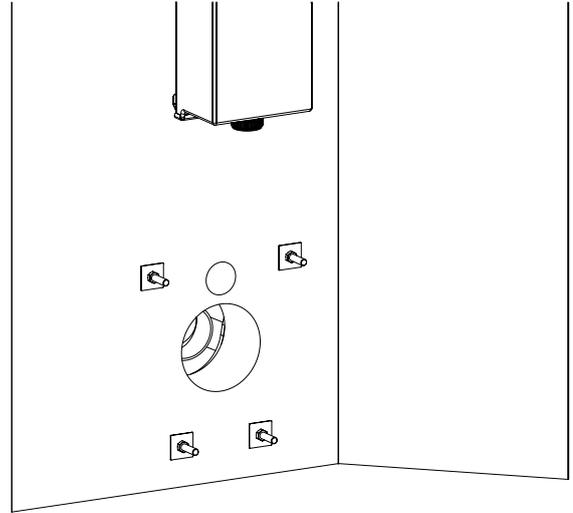


Secure the pan to the wall using the nuts and washers supplied- tighten using a torque wrench to 22-24 Nm.

Step 5

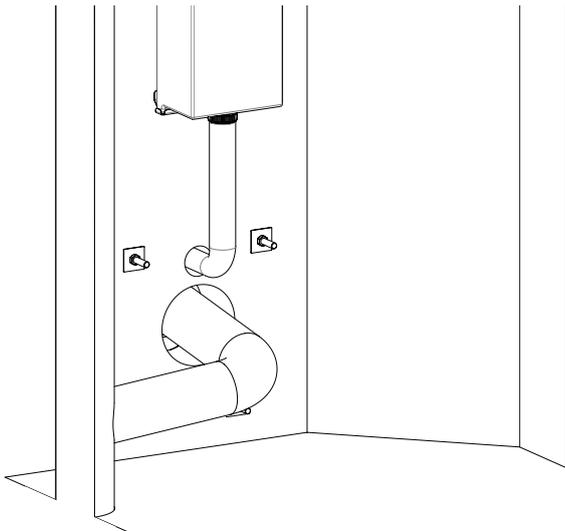

Connections to the WC flush pipe and soil pipes are conventional.

Step 6

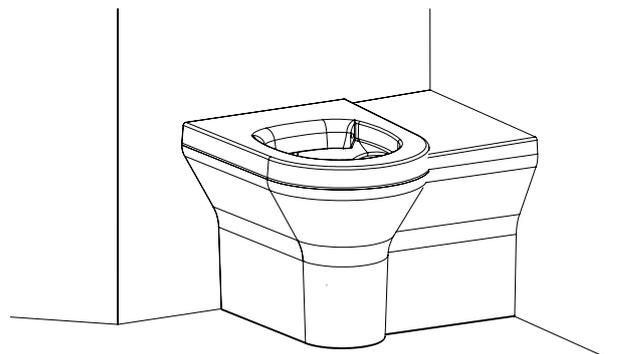

Depending on the local site requirements, anti-pick or silicone sealant can be used around the edges of the wc pan and infill for finishing off.