


DVS

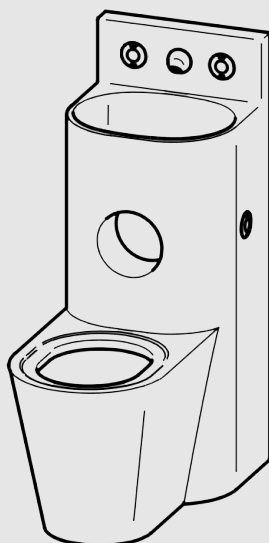



AC04-043

AC04-044



AC04-045

DE	Montage- und Betriebsanleitung	Waschtisch
EN	Installation and operating instructions	Wash basin
FR	Notice de montage et de mise en service	Lavabo
ES	Instrucciones de montaje y servicio	Lavamanos
IT	Istruzioni per il montaggio e l'uso	Lavabo
NL	Montage- en bedrijsinstructies	Wastafel
PL	Instrukcja montażu i obsługi	Umywalka
SV	Monterings- och driftinstruktion	Handtvättställ
CS	Návod pro montáž a provoz	Umyvadlo
FI	Asennus- ja käyttöohje	Käsienpesuallas
RU	Инструкция по монтажу и вводу в эксплуатацию	

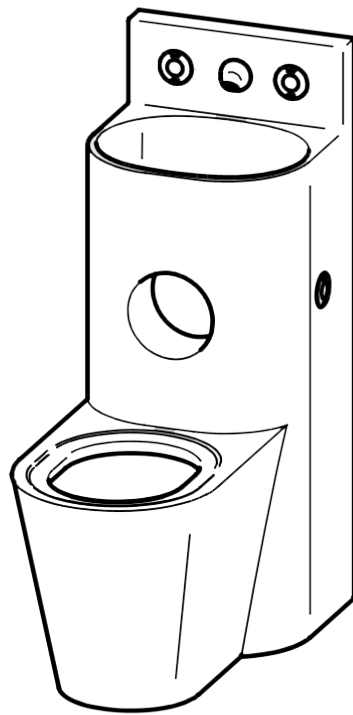


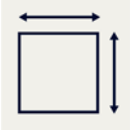


AC04-045

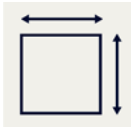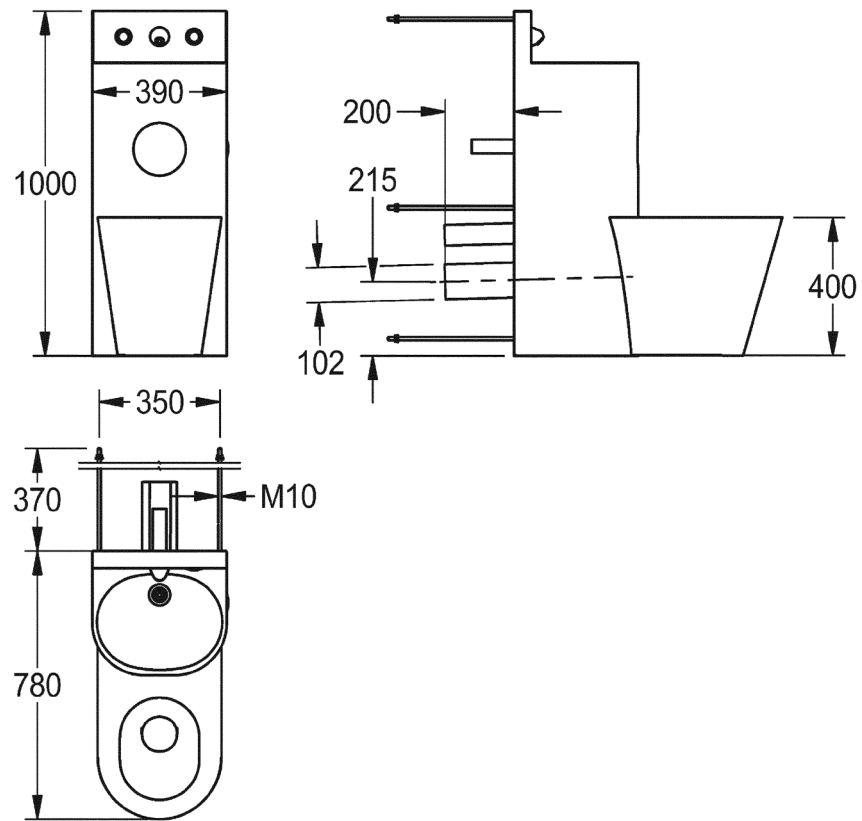


AC04-044

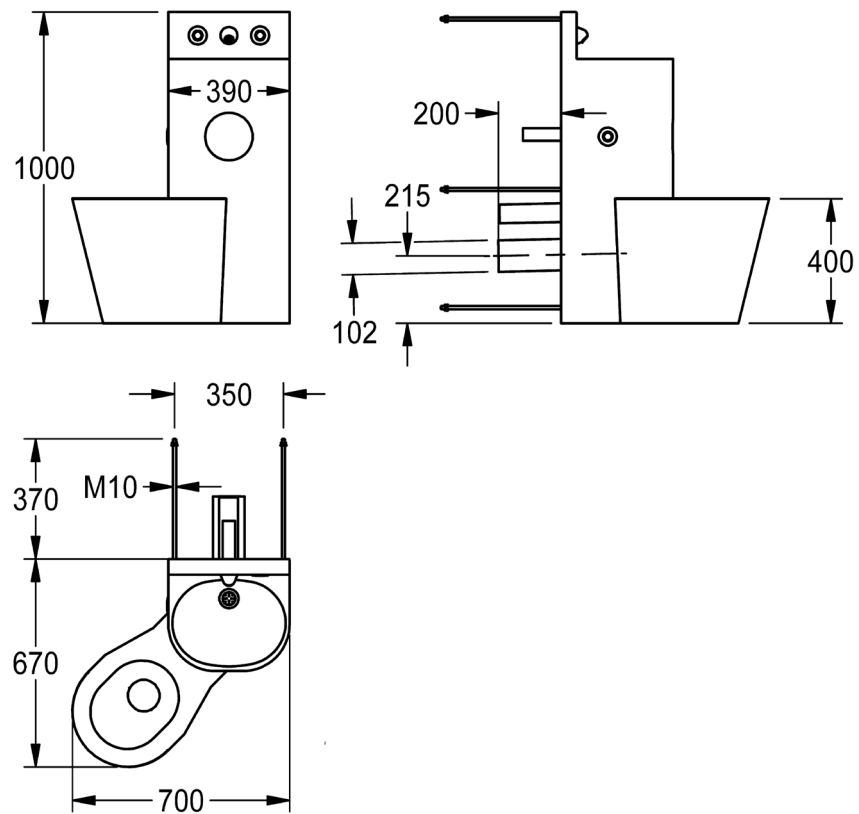

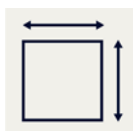

AC04-043

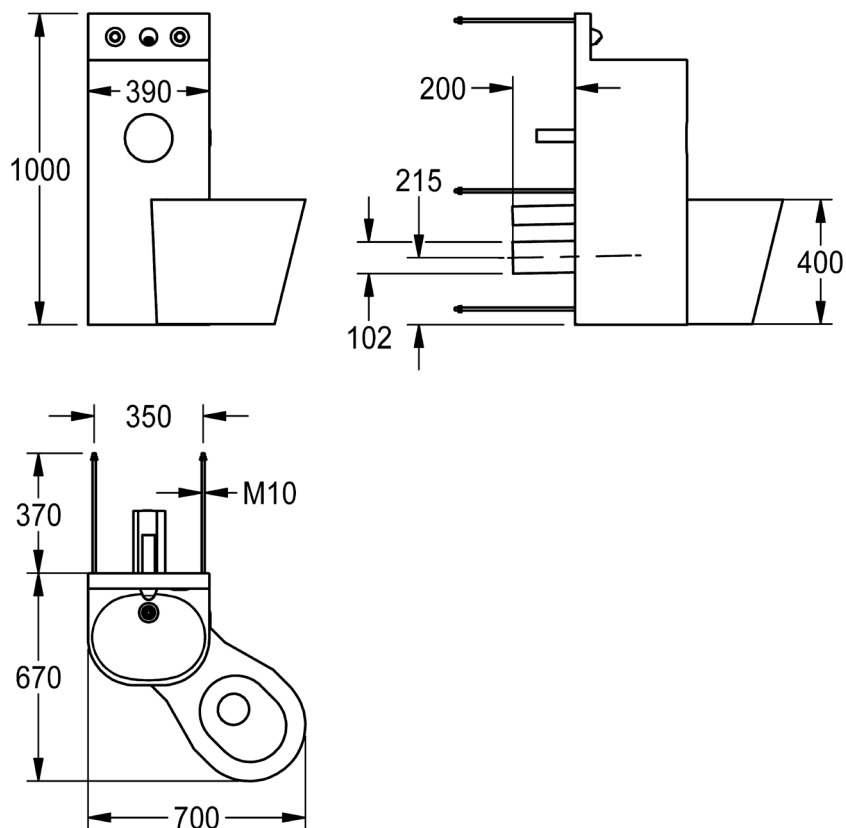

EN**Installation and operating instructions****Important notes**

- ▶ Before installing flush piping system!
- ▶ The fitting must be operated only with original mesh filters!
- ▶ The fitting must be checked and maintained at regular intervals depending on the water quality and in accordance with the local conditions, and rules and regulations applicable at the site.

Technical data

- ▶ Minimum flow pressure 1.0 bar
- ▶ Maximum operating pressure 10 bar
- ▶ Recommended flow pressure 3 bar
- ▶ Supply voltage 24 V DC
- ▶ Type of protection IP 68



- ▶ Power consumption 2.5 W
- ▶ Volume flow at 3 bar flow pressure: 1.8 l/min
- ▶ Flow duration ~10 s adjustable




- ▶ Power consumption 6 W
- ▶ Flushing volume 6 - 9 l adjustable

DE**Montage- und Betriebsanleitung****Wichtige Hinweise**


- ▶ Vor Installation Rohrleitungen gemäß DIN 1988 spülen!
- ▶ Armatur nur mit original Sieben betreiben!
- ▶ In Abhängigkeit von der Wasserqualität, den örtlichen Gegebenheiten und den vor Ort geltenden Bestimmungen die Armatur in regelmäßigen Abständen prüfen und warten.

Technische Daten

- ▶ Mindestfließdruck 1,0 bar
- ▶ Maximaler Betriebsdruck 10 bar
- ▶ Empfohlener Fließdruck 3 bar
- ▶ Anschlussspannung 24 V DC
- ▶ Schutzart IP 68



- ▶ Leistungsaufnahme 2,5 W
- ▶ Volumenstrom bei 3 bar Fließdruck: 1,8 l/min
- ▶ Fließzeit ~10 s einstellbar




- ▶ Leistungsaufnahme 6 W
- ▶ Spülmenge 6 - 9 l einstellbar

1. Installation




EN Installation
FR Montage
ES Montaje
IT Montaggio

NL Montage
PL Montaż
SV Montering

CS Montáž
FI Asennus
RU Монтаж

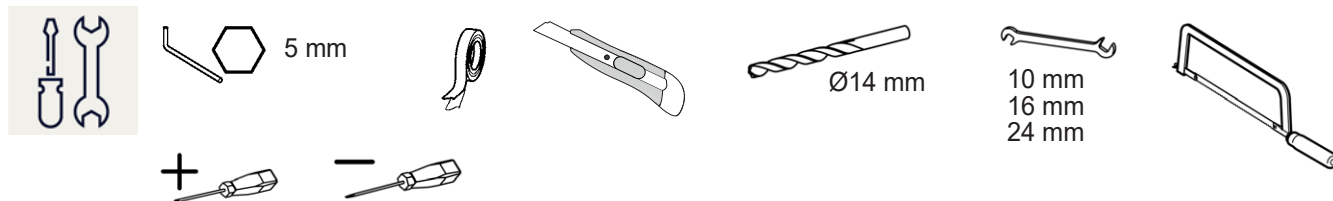


1

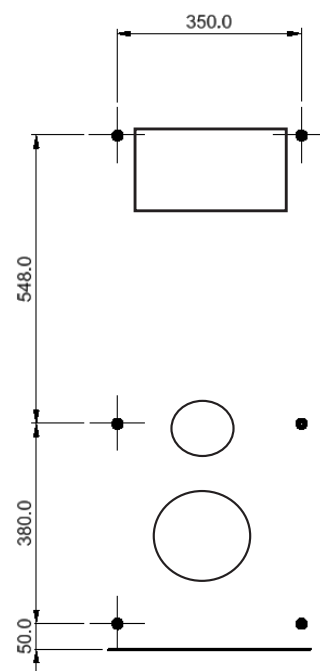
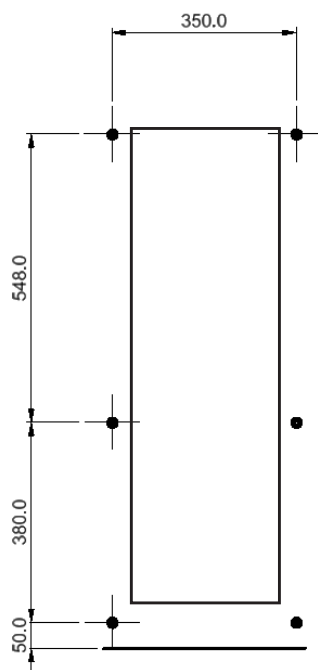
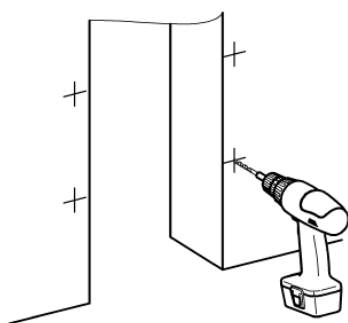


Create drill points for rods and wall cut-out prior to fitting (see examples of wall cut outs above)

2



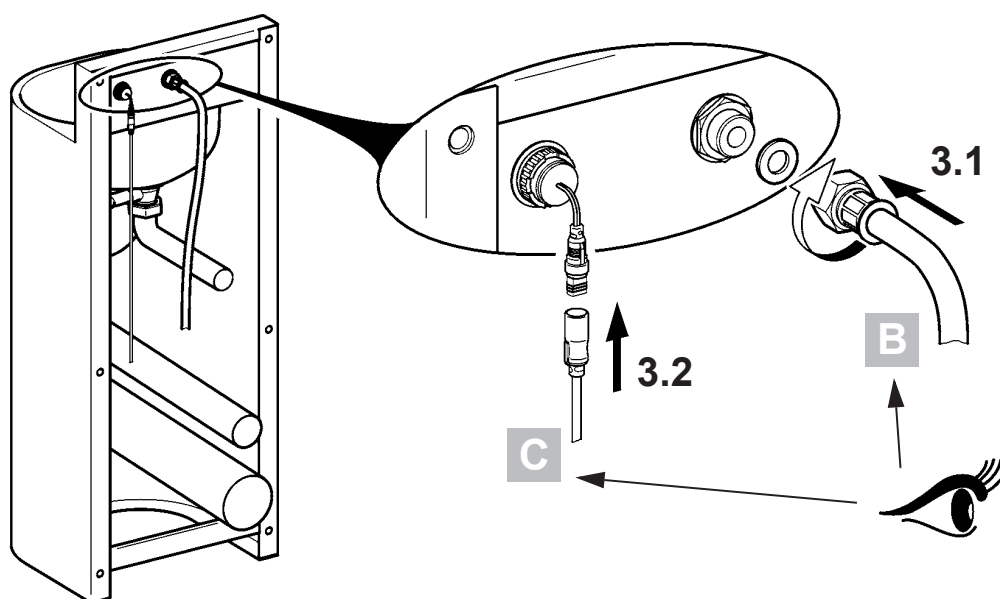


Attach flexi hose to the spout and align unit to the cut-outs and push to wall.

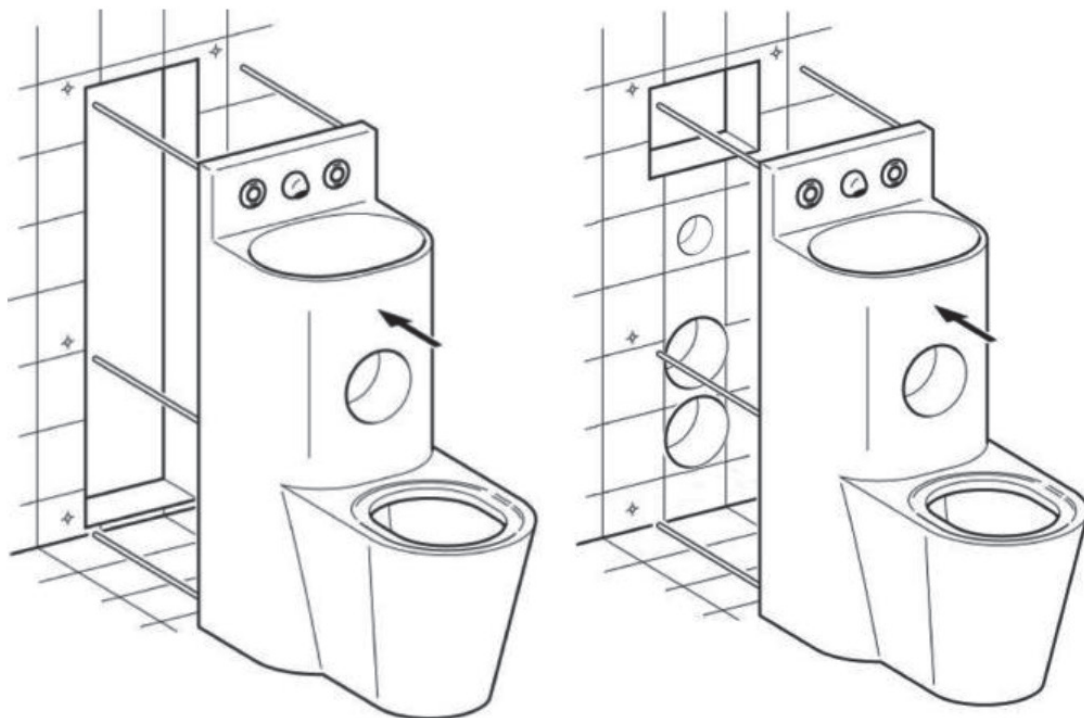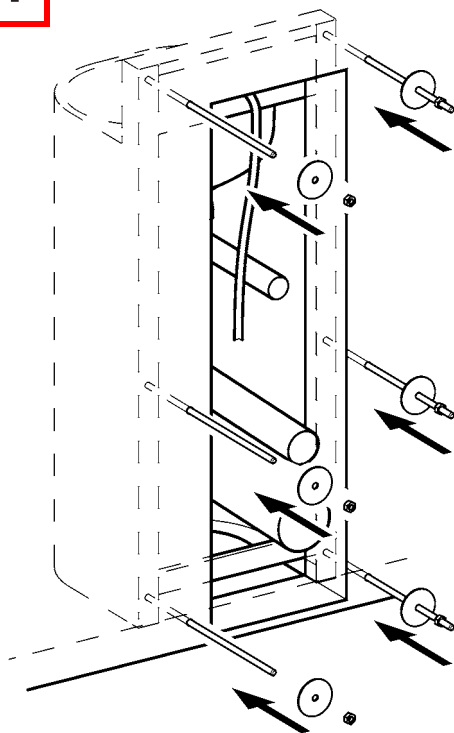
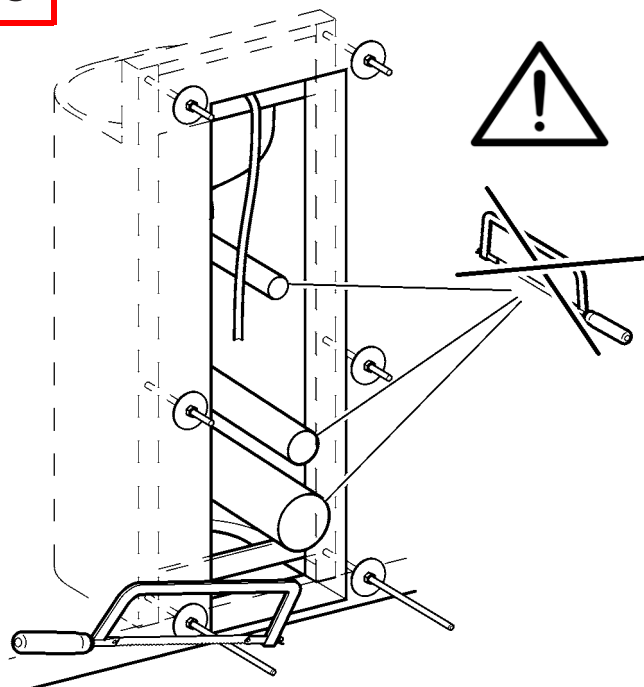
3**4****5**

Pass rods, cables and hose through cavities and address any fixings points if required. Complete all rear plumbing with connection to Cistern and Control Unit. Location and position of these parts may vary depending on service duct/room layout


6

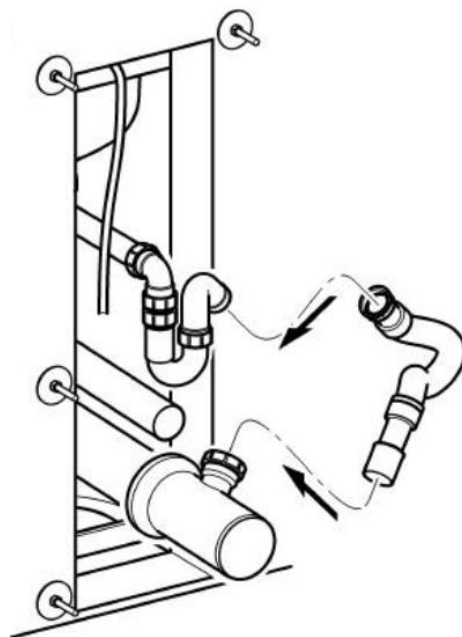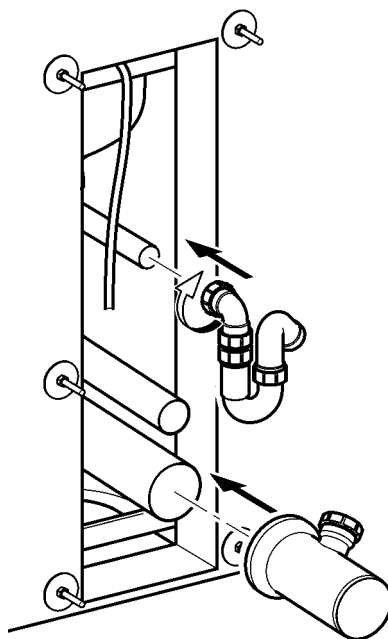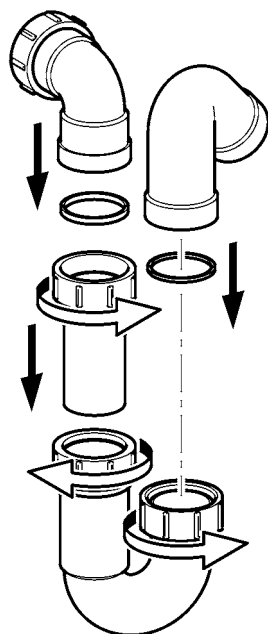

7

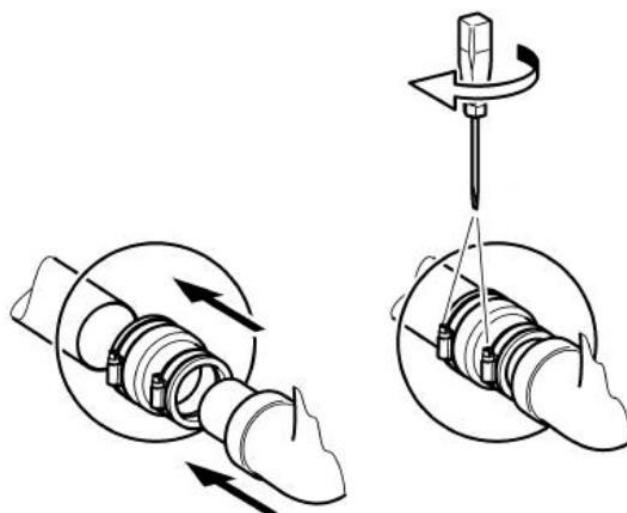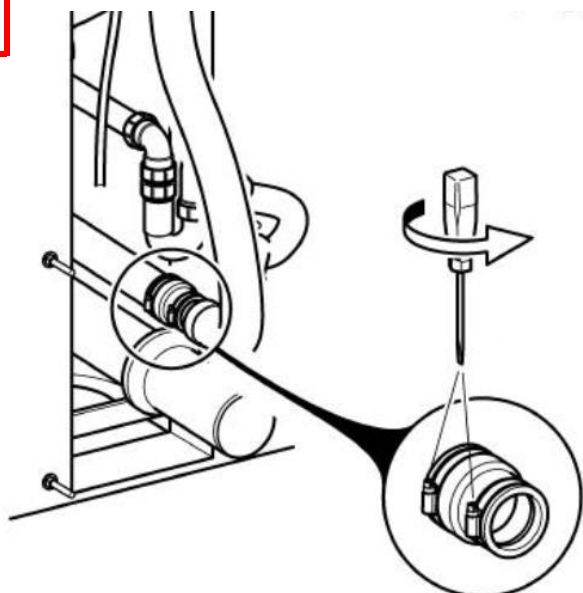


8

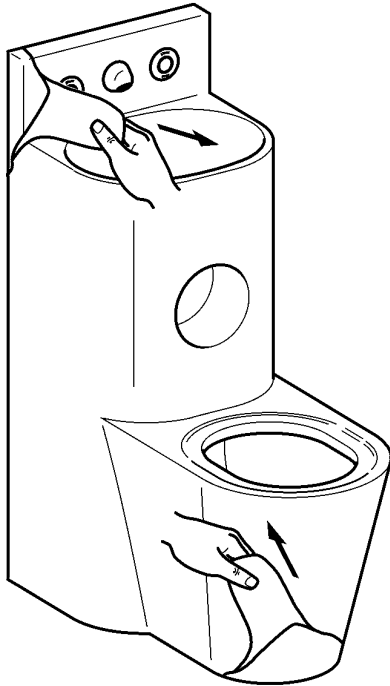

9



10

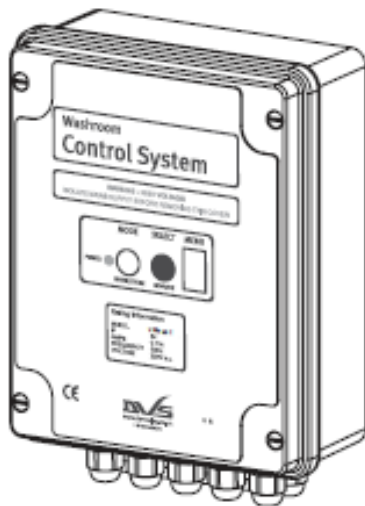

Please refer to the individual manual for the washroom control system set up. However please note that the control unit should be located in a dry location and not exposed to dirt, dust or damp. The unit should be accessible when required, but not within easy general reach of unauthorised persons.

It will be necessary to make adjustments and service the control unit after installation, and in the future. Secure access areas and duct spaces are recommended. The control unit is not designed for direct surface mounting into washroom areas. Never open the cover with the supply live. The routes that cables will take when connecting external equipment to the control unit should also be planned at this stage.

2. Function

EN Function

FR Fonctionnement

ES Función

IT Funzionamento

NL Werking


PL Funkcja

SV Funktion

CS Funkce

FI Toiminto

RU Функционирование

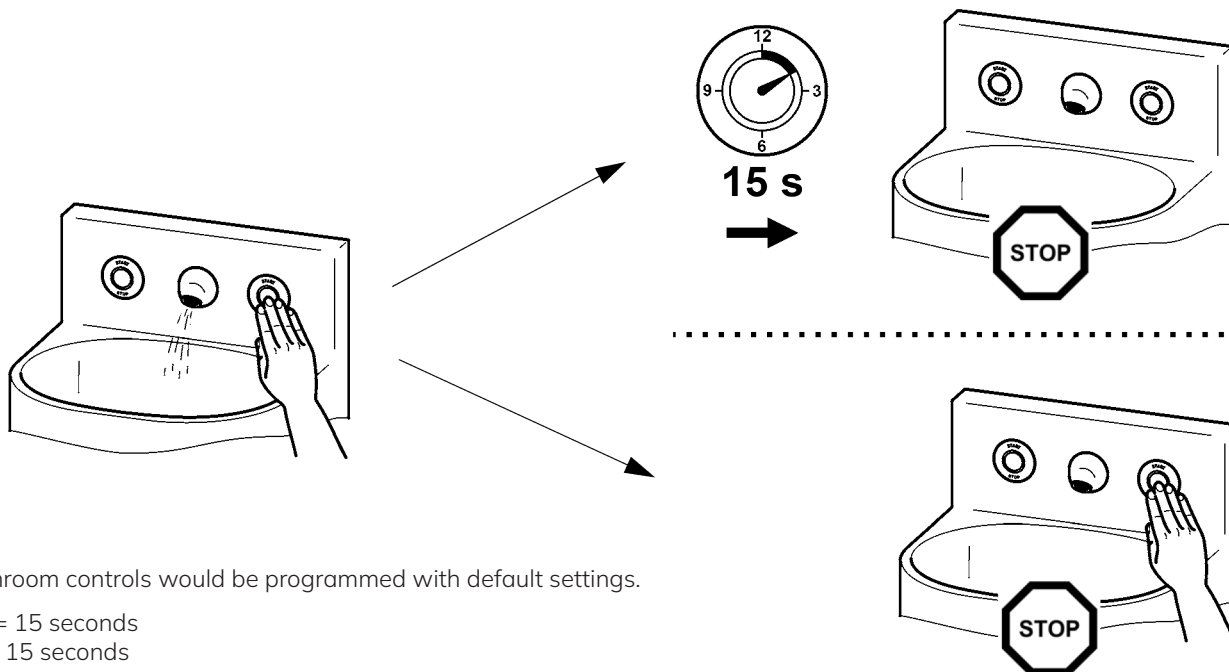

Washroom controls would be programmed with default settings.

WC = 4 seconds

3. Refill paper

EN Refill paper

FR Ajouter du papier

ES Rellenar papel

IT Ricaricare carta

NL Papier bijvullen


PL Uzupełnij papier

SV Fyll på papper

CS Doplnit papír

FI Paperin uudelleen täyttö

RU Дозаправить бумагу

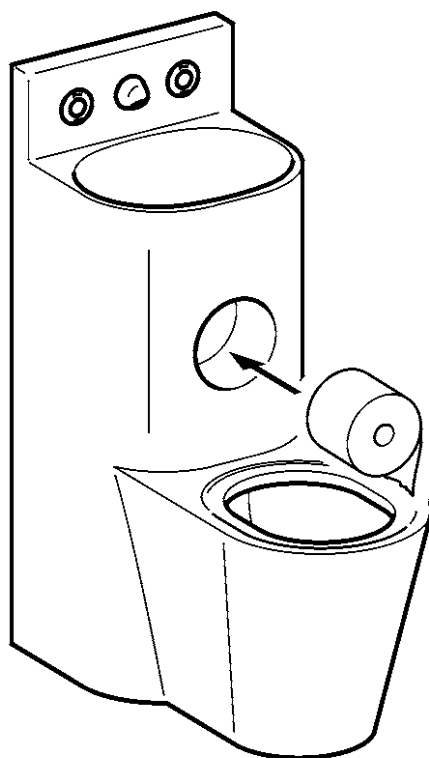

Australia

PR Kitchen and
Water Systems Pty Ltd
Dandenong South VIC 3175
Phone +61 3 9700 9100

Austria

KWC Austria GmbH
6971 Hard, Austria
Phone +43 5574 6735 0

**Belgium, Netherlands &
Luxembourg**

KWC Aquarotter GmbH
9320 Aalst; Belgium
Phone +31 (0) 492 728 224

Czech Republic

KWC Aquarotter GmbH
14974 Ludwigsfelde, Germany
Phone +49 3378 818 309

France

KWC Austria GmbH
6971 Hard, Austria
Phone +33 800 909 216

Germany

KWC Aquarotter GmbH
14974 Ludwigsfelde
Phone +49 3378 818 0

Italy

KWC Austria GmbH
6971 Hard, Austria
Numero Verde +39 800 789 233

Middle East

KWC ME LLC Ras Al Khaimah,
United Arab Emirates
Phone +971 7 2034 700

Poland

KWC Aquarotter GmbH
14974 Ludwigsfelde, Germany
Phone +48 58 35 19 700

Spain

KWC Austria GmbH
6971 Hard, Austria
Phone +43 5574 6735 211

Switzerland & Liechtenstein

KWC Group AG
5726 Unterkulm, Switzerland
Phone +41 62 768 69 00

Turkey

KWC ME LLC Ras Al Khaimah,
United Arab Emirates
Phone +971 7 2034 700

United Kingdom

KWC DVS Ltd - Northern Office
Barlborough S43 4PZ
Phone +44 1246 450 255

KWC DVS Ltd - Southern Office
Paignton TQ4 7TW
Phone +44 1803 529 021

EAST EUROPE

Bosnia Herzegovina
Bulgaria | Croatia
Hungary | Latvia
Lithuania | Romania
Russia | Serbia | Slovakia
Slovenia | Ukraine

KWC Aquarotter GmbH
14974 Ludwigsfelde, Germany
Phone +49 3378 818 261

SCANDINAVIA & ESTONIA

Finland | Sweden | Norway
Denmark | Estonia

KWC Nordics Oy
76850 Naarajärvi, Finland
Phone +358 15 34 111

OTHER COUNTRIES

KWC Austria GmbH
6971 Hard, Austria
Phone +43 5574 6735 0

